

130202 to 130298

Illustrated Parts List

MODEL SERIES

130202 to 130298

TYPE NUMBERS

0010 through 0070


0110 through 0434

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW:


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing or name plate of engine. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.



130202 to 130298

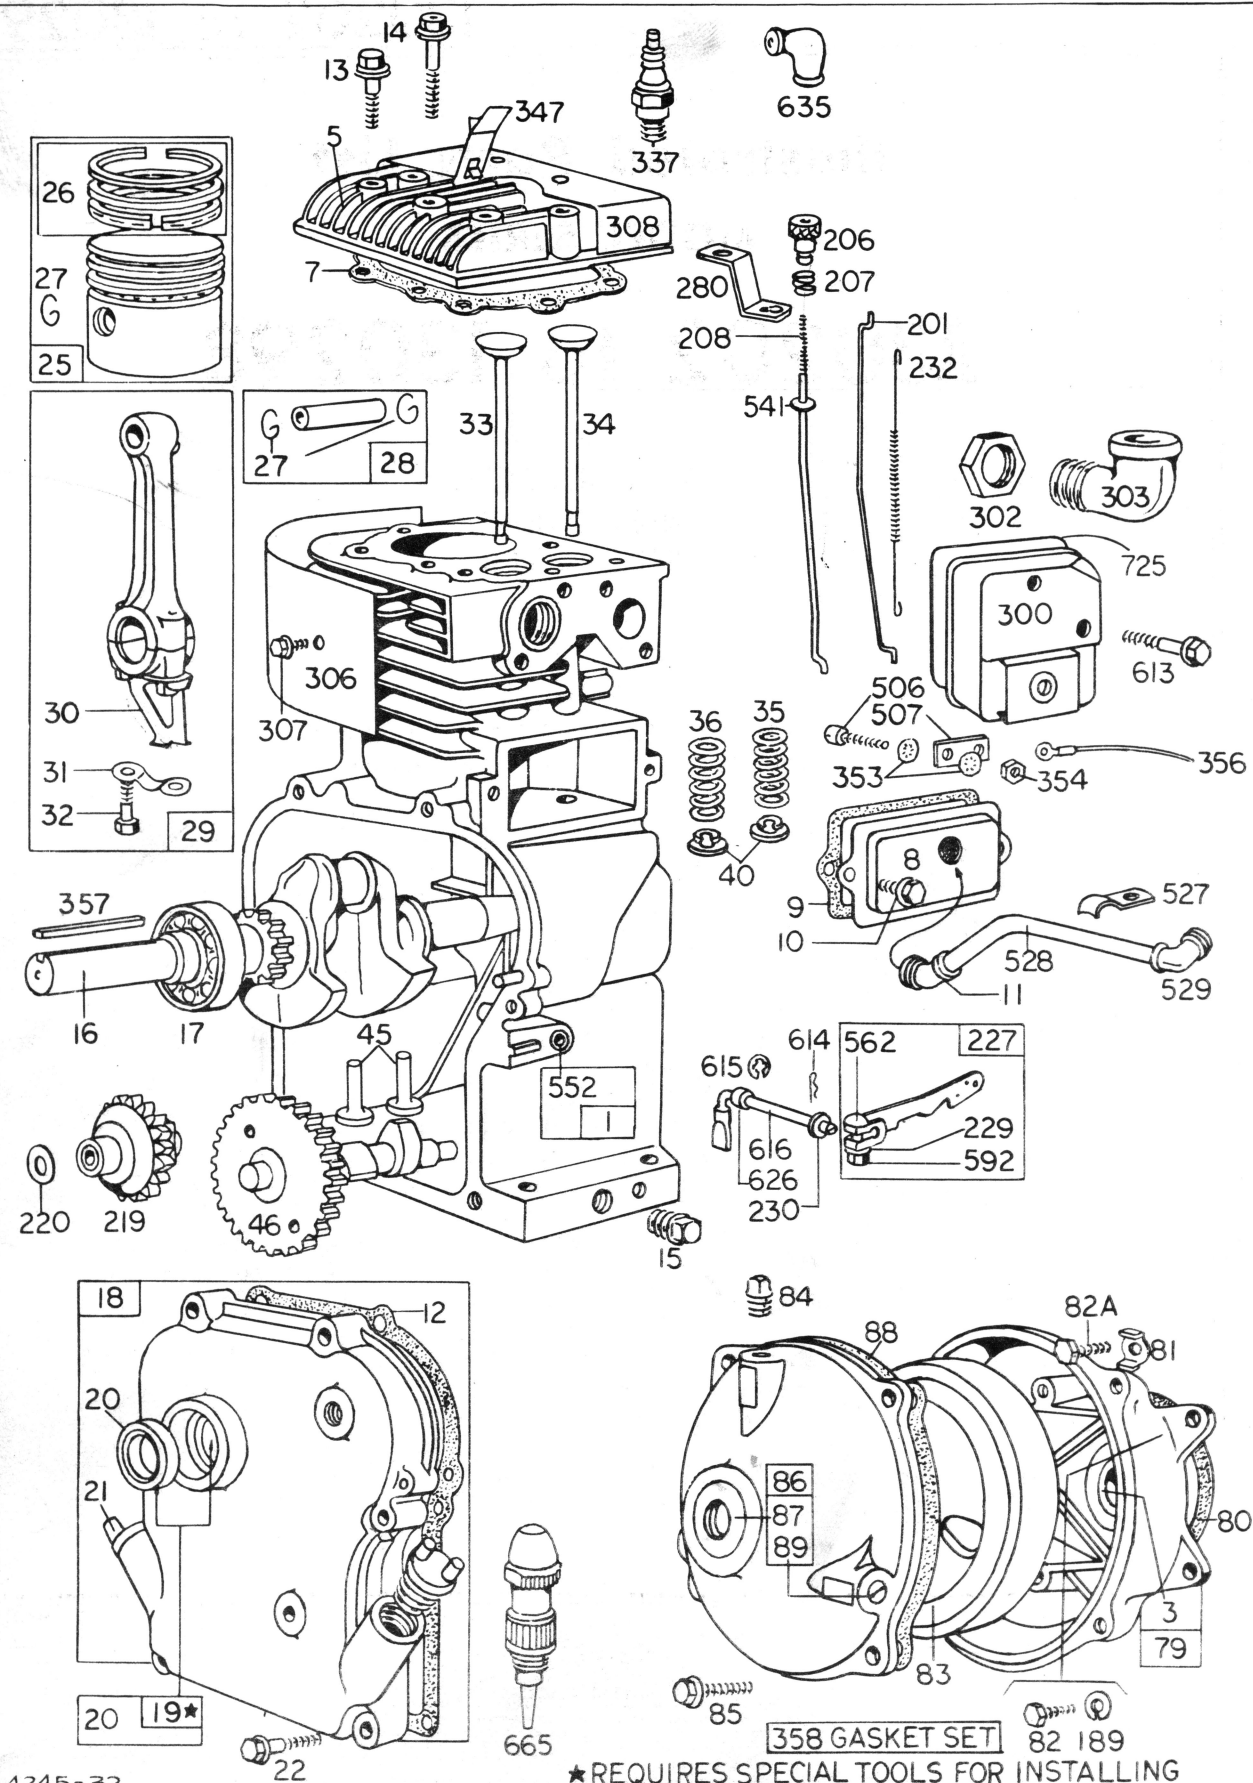


Assemblies include all parts shown in frames.

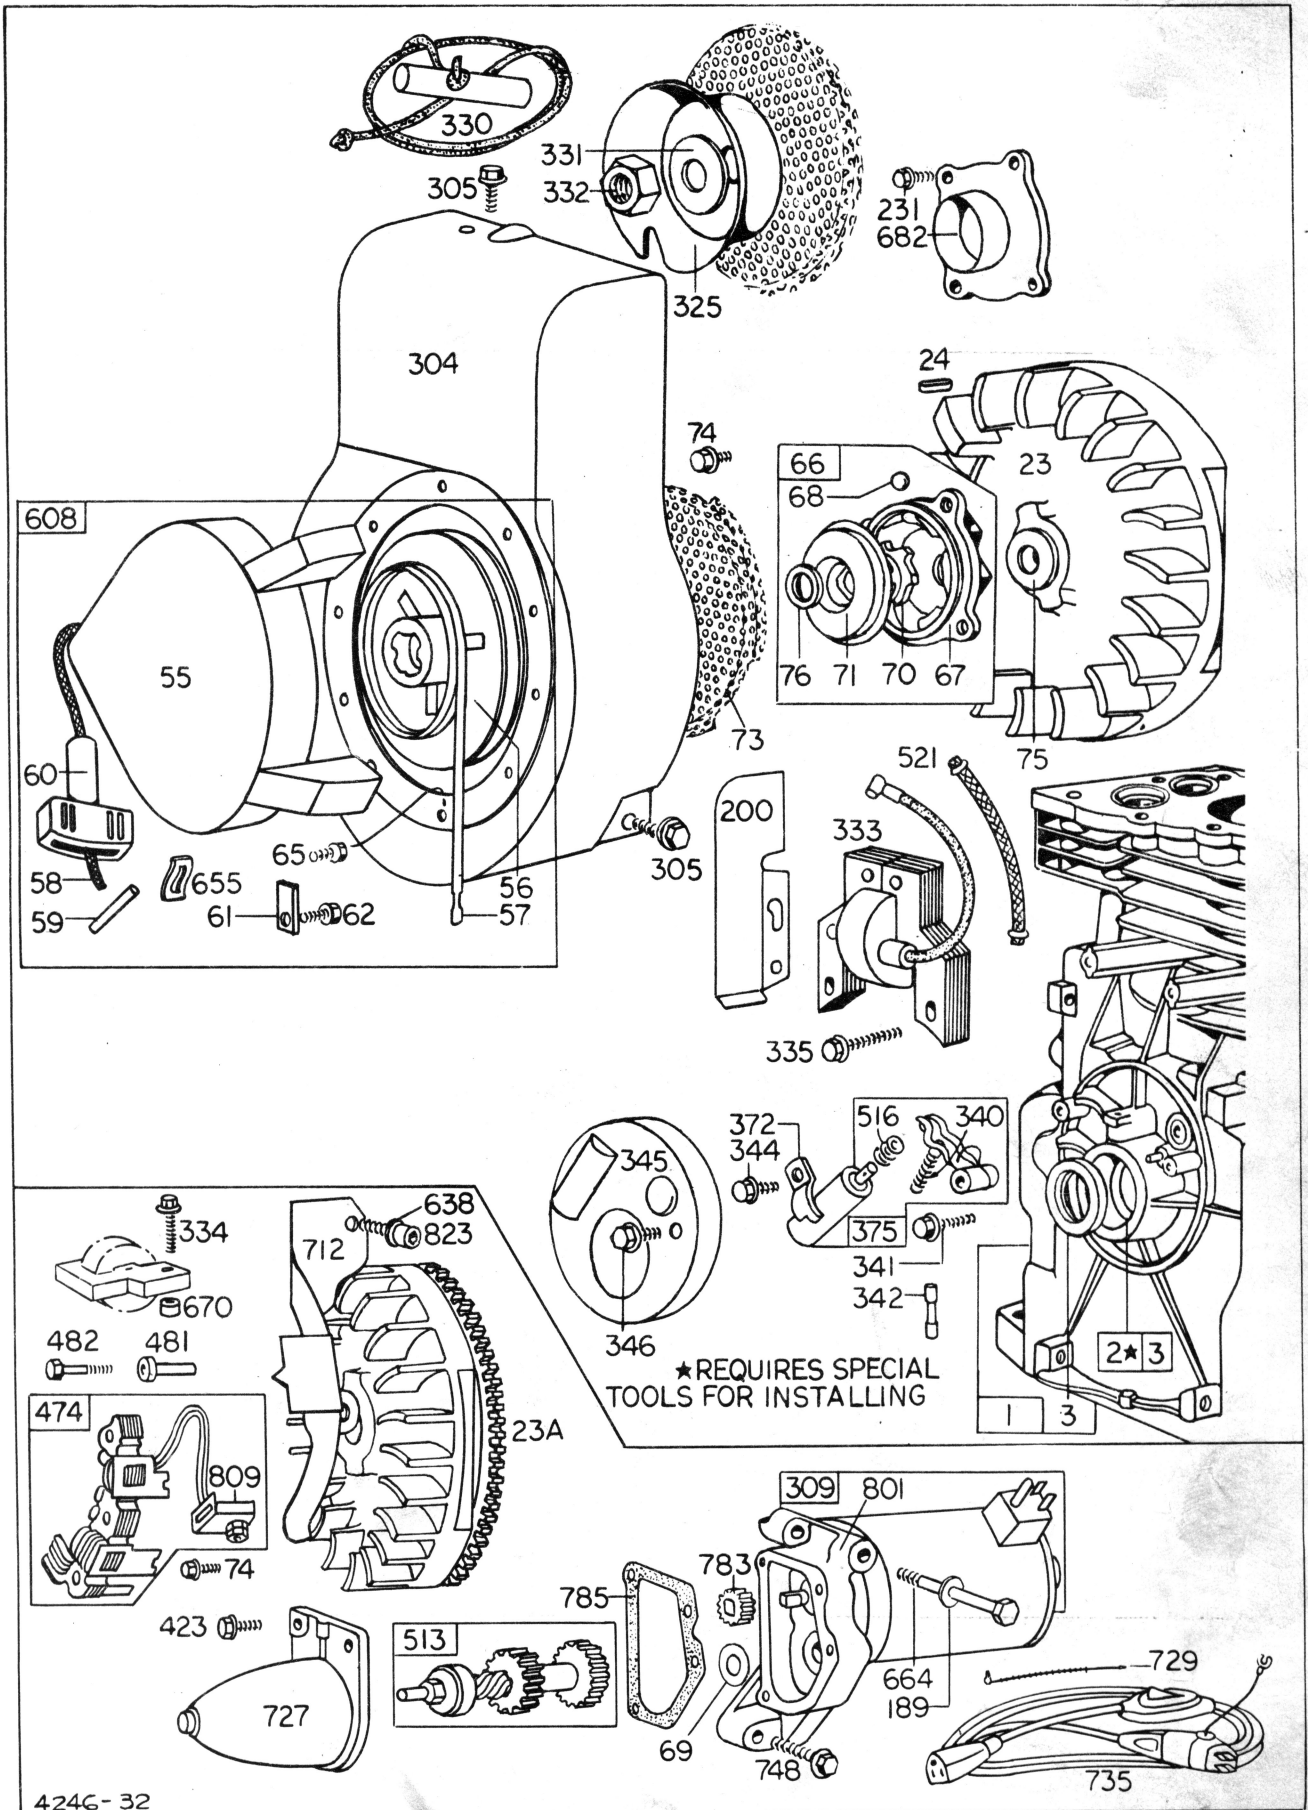

Assemblies include all parts shown in frames.

130202 to 130293

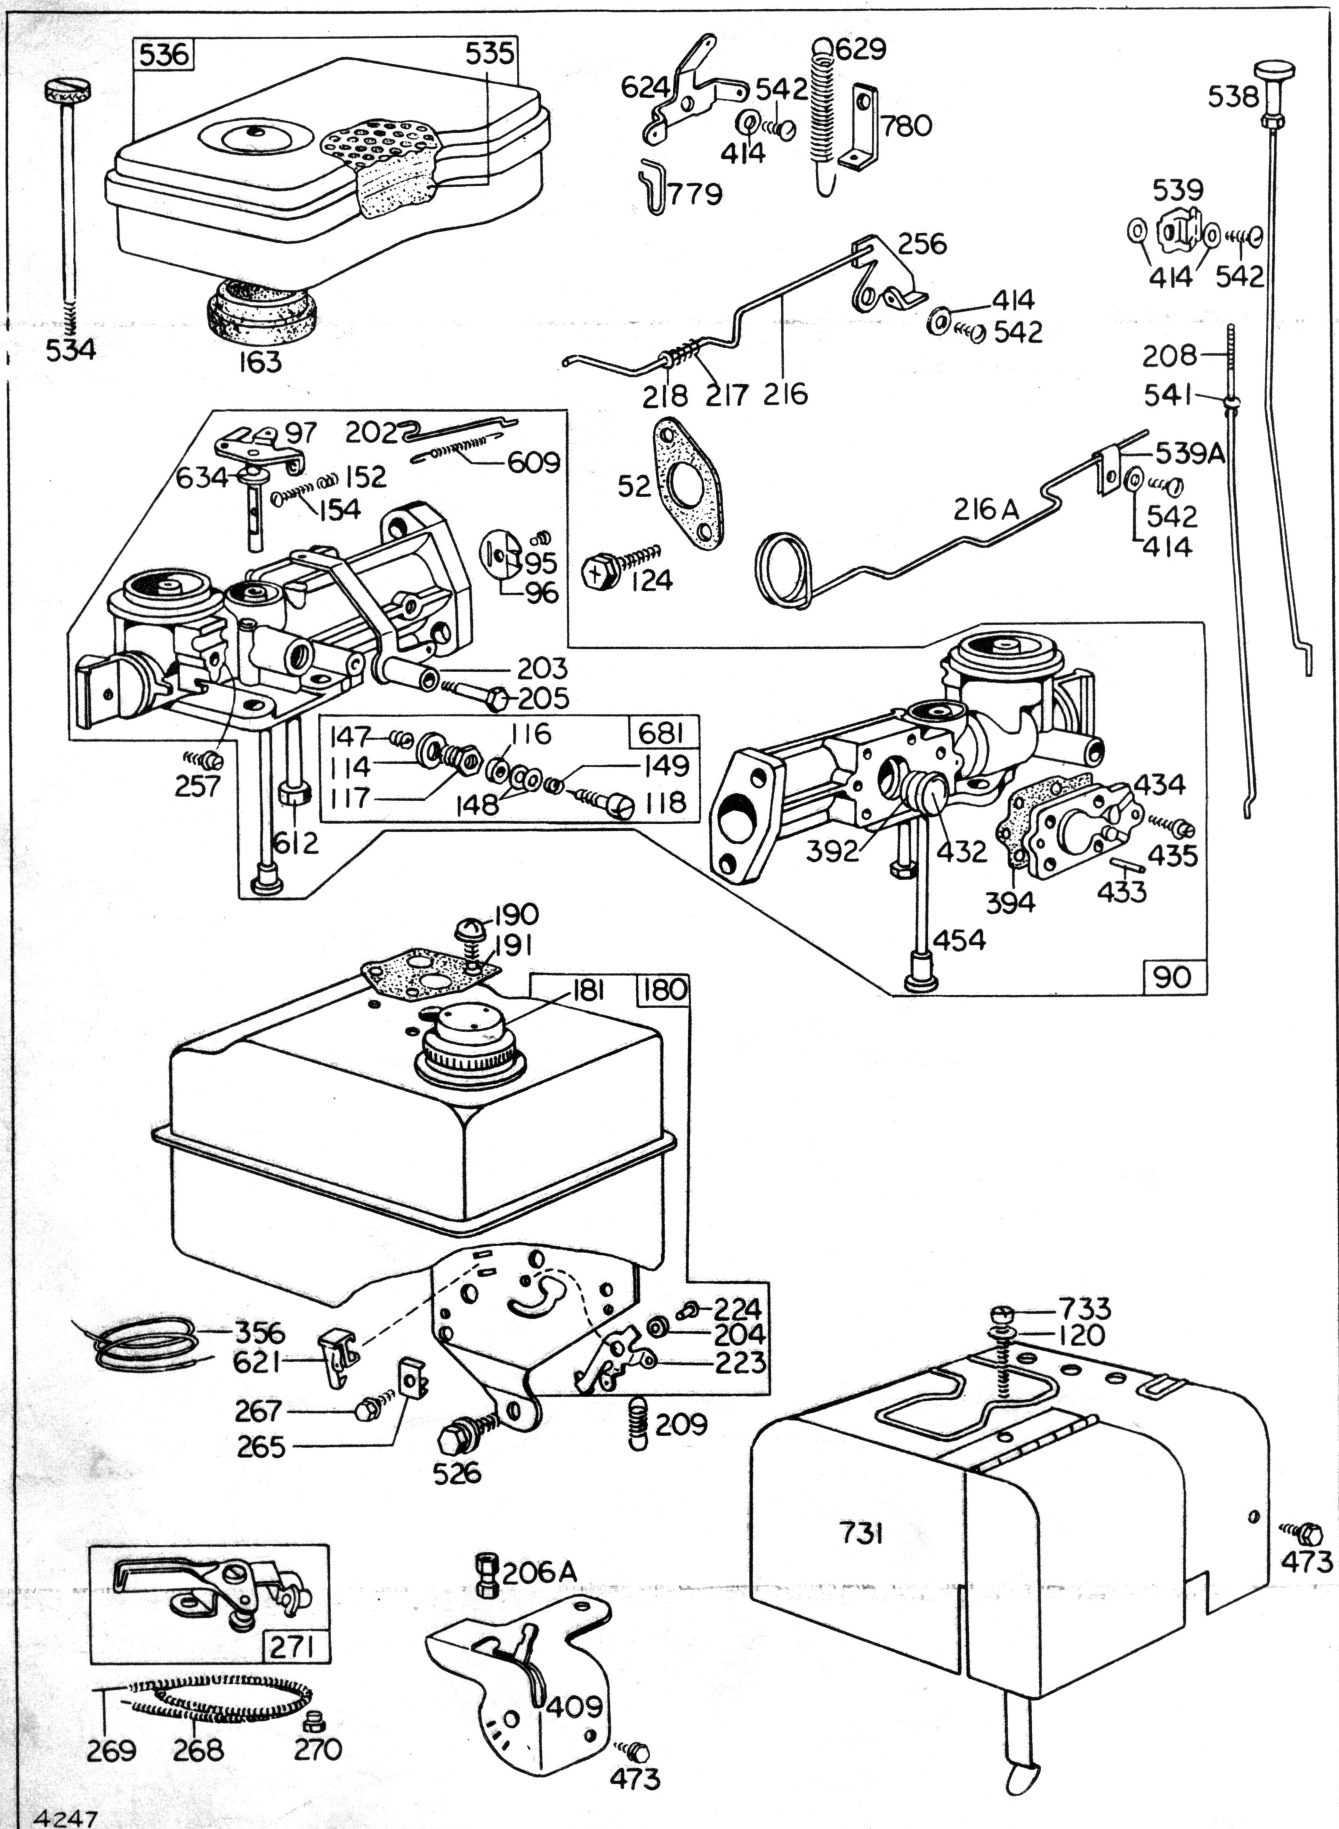

Assemblies include all parts shown in frames.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	299540	Cylinder Assembly	16	260938	Crankshaft			261141 Crankshaft
	Note:	299643 Cylinder Assy.		Note:	260939 Crankshaft			Used on type Nos. 0361, 0388.
		Used on type Nos. 0038, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413.			Used on type Nos. 0035, 0112, 0156, 0171, 0178, 0179, 0182, 0265, 0309, 0315, 0316, 0324, 0337, 0340, 0341, 0348, 0364, 0382.			261142 Crankshaft
		390852 Cylinder Assy.			260941 Crankshaft			Used on type Nos. 0373, 0391, 0392, 0400, 0411.
		Used on type Nos. 0119, 0121, 0123, 0345, 0351, 0352, 0353, 0358, 0361, 0373, 0388, 0391, 0392, 0400, 0402, 0406, 0409, 0411, 0417, 0418, 0419, 0424, 0425.			Used on type Nos. 0037, 0114, 0174, 0176, 0180, 0213, 0217, 0332, 0399.			261148 Crankshaft
2	297565	Bushing—Cylinder			260942 Crankshaft			Used on type Nos. 0338, 0347, 0368, 0379, 0384.
	Note:	Requires special tools for installation.			Used on type Nos. 0038, 0115, 0139, 0157, 0160, 0169, 0183, 0197, 0201, 0219, 0246, 0258, 0291, 0295, 0342, 0349, 0363, 0386, 0390, 0403, 0413, 0415, 0433.	17	99158	Bearing—Ball
3	89660	Seal—Oil			260958 Crankshaft	18	297602	Cover Assy.—Crankcase
5	211542	Head—Cylinder			Used on type Nos. 0036, 0113, 0128, 0130, 0131, 0134, 0138, 0150, 0154, 0164, 0166, 0170, 0186, 0192, 0203, 0206, 0210, 0212, 0220, 0221, 0222, 0228, 0238, 0239, 0240, 0245, 0248, 0251, 0255, 0256, 0257, 0259, 0262, 0267, 0268, 0269, 0270, 0273, 0284, 0287, 0290, 0292, 0293, 0294, 0298, 0300, 0303, 0304, 0305, 0311, 0312, 0314, 0323, 0329, 0356, 0360, 0376, 0378, 0389, 0393, 0397, 0401, 0407, 0422.		Note:	298183 Cover Assy.—Crankcase
7	*270383	Gasket—Cylinder Head			260987 Crankshaft			Used on type Nos. 0070, 0117, 0125, 0126, 0141, 0159, 0208, 0224, 0234, 0249, 0301, 0359, 0369, 0371, 0430.
8	294178	Breather—Valve Chamber			Used on type Nos. 0049, 0116, 0181, 0193, 0202, 0214, 0227, 0322, 0325, 0327, 0350, 0355, 0412, 0416, 0420, 0431.			298204 Cover Assy.—Crankcase
9	*27549	Gasket—Valve Cover			261046 Crankshaft			Used on type Nos. 0035, 0036, 0037, 0038, 0112, 0113, 0114, 0115, 0128, 0130, 0131, 0134, 0138, 0139, 0150, 0154, 0156, 0157, 0160, 0164, 0166, 0169, 0170, 0171, 0174, 0176, 0178, 0179, 0180, 0182, 0183, 0186, 0192, 0197, 0201, 0203, 0206, 0210, 0212, 0213, 0217, 0219, 0220, 0221, 0222, 0228, 0230, 0238, 0239, 0240, 0245, 0246, 0248, 0251, 0255, 0256, 0257, 0258, 0259, 0262, 0265, 0267, 0268, 0269, 0270, 0273, 0284, 0287, 0290, 0291, 0292, 0293, 0294, 0298, 0299, 0298, 0300, 0303, 0304, 0305, 0312, 0314, 0315, 0316,
10	93394	Screw—Breather Mtg. Sem			261118 Crankshaft			Used on type Nos. 0119, 0121, 0123, 0345, 0353, 0402, 0409, 0417, 0418, 0419, 0425.
11	66578	Grommet—Breather Tube						
12	*270080	Gasket—Crankcase—						
		.015" thick (Standard)						
	270125	Gasket—Crankcase—						
		.005" thick						
	270126	Gasket—Crankcase—						
		.009" thick						
13	93368	Screw—Cylinder Head						
		(2-3/32" long)						
	Note:	93583 Stud—Cyl. Head						
		22963 Washer						
		Used on type Nos. 0414, 0423.						
14	93369	Screw—Cylinder Head						
		(2-15/32" long)						
	Note:	93583 Stud—Cyl. Head						
		22963 Washer						
		Used on type No. 0414.						
15	91249	Plug—Pipe, 1/4" Std., Square Head						
	Note:	93448 Plug—Pipe (Hex. Socket)						
		Used on type Nos. 0181, 0207, 0318, 0352.						

* Included in Gasket Set—Part No. 297615.

130202 to 130298

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0323, 0324, 0329, 0332, 0337, 0340, 0341, 0342, 0348, 0349, 0356, 0360, 0361, 0363, 0364, 0376, 0378, 0382, 0386, 0388, 0389, 0390, 0393, 0397, 0399, 0401, 0403, 0407, 0413, 0415, 0422, 0433. 298212 Cover Assy. — Crankcase Used on type Nos. 0049, 0116, 0181, 0193, 0202, 0214, 0227, 0322, 0325, 0327, 0350, 0351, 0352, 0355, 0406, 0412, 0416, 0420, 0424, 0431. 298517 Cover Assy. — Crankcase Used on type Nos. 0148, 0149, 0189, 0229, 0232, 0233, 0282, 0285, 0286, 0299, 0306, 0328, 0334, 0336, 0346, 0357, 0375, 0379, 0385, 0395.			Uses: 65304 Gasket— Filler Cap 91258 Pipe—Oil Filler 230537 Adapter— Pipe Used on type No. 0401. 390848 Cap and Dipstick— Oil Filler Uses: 299284 Tube—Oil Filler 68838 Seal—Filler Tube (between Tube and Crankcase Cover) Used on type Nos. 0207, 0318.			211469 Ring, Piston, Oil, Standard 298983 Ring Set—.010" O.S. Piston Consists of: 211504 Ring, Piston, Comp., Top, .010" O.S. 211503 Ring, Piston, Comp., Center, .010" O.S. 211505 Ring, Piston, Oil, .010" O.S. 298984 Ring Set—.020" O.S. Piston Consists of: 211507 Ring, Piston, Comp., Top, .020" O.S. 211506 Ring, Piston, Comp., Center, .020" O.S. 211508 Ring, Piston, Oil, .020" O.S. 298985 Ring Set—.030" O.S. Piston Consists of: 211511 Ring, Piston, Comp., Top, .030" O.S. 211510 Ring, Piston, Comp., Center, .030" O.S. 211512 Ring, Piston, Oil, .030" O.S.
19	297603	Bushing—Crankcase Cover Note: Requires special tools for installation.	22	93032	Screw—Crankcase Cover Mounting Sem Note: 93656 Stud (1) Used to mount Crankcase Cover on type Nos. 0301, 0369, 0430.			
20	294606	Seal—Oil Note: 293740 Seal—Oil Used on Model 130232 Series Engines. 298041 Seal—Oil Used on the Auxiliary P. T. O. Shaft on type Nos. 0070, 0117, 0125, 0126, 0141, 0159, 0208, 0224, 0234, 0249, 0301, 0359, 0369, 0371, 0430. 298504 Oil Seal and Spacer Used on type Nos. 0148, 0149, 0189, 0229, 0232, 0233, 0282, 0285, 0286, 0299, 0306, 0328, 0334, 0336, 0346, 0357, 0375, 0379, 0385, 0395.	23	297229	Flywheel—Magneto Note: 211424 Pulley—V-Belt Uses: 68428 Belt—Vee Used between Flywheel and Starter Clutch on type No. 0147. 391081 Flywheel Used on type Nos. 0373, 0391, 0392, 0400.			
			23A	390509	Flywheel Assy.	27	26026	Lock—Piston Pin
			24	61760	Key—Flywheel	28	298909	Pin Assy.—Piston—Std.
							298908	Pin Assy.—Piston— .005" O.S.
					MODEL 130200 SERIES PISTON RING SETS: Note: For Chrome Piston Ring Set — Standard Size — order Part No. 299742.	29	299430	Rod Assy.—Connecting Note: For Connecting Rod with .020" undersize Crank-pin Bore — order No. 390459.
			25	298904	Piston Assy.—Standard	30	221890	Dipper—Connecting Rod
				298905	Piston Assy.—.010" O.S.	31	221876	Lock—Conn. Rod Screw
				298906	Piston Assy.—.020" O.S.	32	92296	Screw—Connecting Rod
				298907	Piston Assy.—.030" O.S.	33	211119	Valve—Exhaust Note: 260860 Valve—Exhaust Used on type Nos. 0038, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219,
21	66768	Plug—Oil Filler Note: 29357 Cap and Dipstick— Oil Filler	26	298982	Ring Set—Standard Piston Consists of: 211467 Ring, Piston, Comp., Top, Standard 211468 Ring, Piston, Comp., Center, Standard			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
34	261044	0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413. Valve—Intake (Used after Serial No. 6908087) Note: 260961 Valve—Intake (Used before Serial No. 6908117) 260861 Valve—Intake (Used before Serial No. 6908117) Used on type Nos. 0038, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258.	55	299431	Housing—Rewind Starter Note: 297663 Housing—Rewind Starter Used on type No. 0147.			Note: 298798 Clutch Assy.—Rewind Starter Used on type Nos. 0017, 0129, 0130, 0147, 0173, 0181, 0185, 0195, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0238, 0239, 0245, 0255, 0259, 0276, 0277, 0283, 0285, 0290, 0298, 0299, 0304, 0307, 0319, 0324, 0333, 0345, 0350, 0351, 0352, 0353, 0355, 0357, 0359, 0376, 0389, 0404, 0406, 0409, 0414, 0418, 0419, 0420, 0422, 0424, 0425, 0431.
35	260552	Spring—Intake Valve	56	295871	Pulley—Rewind Starter Note: 298738 Pulley—Rewind Starter Used on type Nos. 0257, 0293, 0294, 0296, 0303, 0367.	67	211383	Housing—Starter Clutch
36	26478	Spring—Exhaust Valve Note: 26826 Spring—Exhaust Valve Used on type Nos. 0038, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413.	57	294303	Spring—Rewind Starter	68	63770	Ball—Clutch
40	93312	Retainer—Valve Spring Note: 292259 Rotocap—Exhaust Valve 230126 Pin—Exhaust Valve Rotocap Retainer 230127 Retainer—Exhaust Valve Rotocap Used on type Nos. 0038, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413.	58	66564	Rope—Rewind Starter—63" long. Note: If longer rope is needed order No. 66574 and cut to required length. 66694 Rope—Rewind Starter Used on type No. 0257.	69	93676	Washer—Spring
45	260642	Tappet—Valve	59	230228	Pin—Starter Grip	70	298436	Ratchet—Rewind Starter Note: 298799 Ratchet—Rewind Starter Uses: 66718 Washer—Thrust Used on type Nos. 0017, 0129, 0130, 0147, 0173, 0181, 0185, 0195, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0238, 0239, 0245, 0255, 0259, 0276, 0277, 0283, 0285, 0290, 0298, 0299, 0304, 0307, 0319, 0324, 0333, 0345, 0350, 0351, 0352, 0353, 0355, 0357, 0359, 0376, 0389, 0404, 0406, 0409, 0414, 0418, 0419, 0420, 0422, 0424, 0425, 0431.
46	211590	Gear—Cam Note: 211618 Gear—Cam Used on type Nos. 0070, 0117, 0125, 0126, 0141, 0159, 0208, 0224, 0234, 0249, 0301, 0359, 0369, 0371, 0430.	60	66728	Grip—Starter Rope			298799 Ratchet—Rewind Starter
52	*27355	Gasket—Carburetor Mounting (2)	61	68848	Bumper—Starter Pulley Note: 68618 Bumper—Starter Pulley Used on type Nos. 0257, 0293, 0294, 0296, 0303, 0367.			66718 Washer—Thrust 230813 Adapter—Ratchet Spring
			62	93254	Screw—Pulley Bumper Mounting			
			65	93067	Screw—Rewind Starter Housing Mounting (Used after Serial No. 6909127) Note: 93163 Screw—Rewind Starter Housing Mtg. Sem (Used before Serial No. 6909157) 93414 Screw—Rewind Starter Housing Mtg. Sem (4) 92290 Washer—Lock (4) 222060 Spacer (4) Mounted to Blower Housing using 93042 Screw—Sem (8) Used on type No. 0147.			
			66	298310	Clutch Assy.—Rewind Starter			

* Included in Gasket Set—Part No. 297615.

130202 to 130298

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
71	221653	260414 Spring—Ratchet Used between Ratchet and Starter Housing. Used on type No. 0147. Washer—Clutch Retainer Note: 93042 Screw—Sem (4) Used to secure Washer to Clutch Housing on type No. 0147. 222277 Cover—Ratchet Housing Used on Type No. 0358.			Used on type Nos. 0016, 0136, 0138, 0140, 0144, 0145, 0147, 0159, 0162, 0173, 0199, 0200, 0203, 0204, 0207, 0209, 0211, 0212, 0214, 0218, 0234, 0236, 0241, 0249, 0260, 0279, 0301, 0313, 0317, 0318, 0331, 0334, 0338, 0346, 0358, 0362, 0365, 0366, 0371, 0375, 0376, 0379, 0387, 0395, 0401, 0402, 0404, 0405, 0412, 0417, 0421, 0434. 390161 Carburetor Assy. Used on type Nos. 0235, 0245, 0259, 0266, 0267, 0269, 0276, 0278, 0282, 0284, 0285, 0286, 0287, 0288, 0289, 0293, 0294, 0296, 0297, 0299, 0303, 0304, 0305, 0306, 0307, 0308, 0326, 0333, 0344, 0347, 0381, 0385, 0392.			0288, 0289, 0293, 0294, 0296, 0297, 0299, 0303, 0304, 0305, 0306, 0307, 0308, 0326, 0333, 0344, 0347, 0381, 0385, 0392.
73	221923	Screen—Starter Pulley Note: 221661 Screen—Starter Pulley Used on type Nos. 0257, 0293, 0294, 0296, 0303, 0367. 221748 Screen—Starter Pulley Used on type No. 0147.				181	298425	Cap—Fuel Tank Note: 293270 Cap—Fuel Tank Used on type Nos. 0373, 0380, 0385. 297863 Cap—Fuel Tank Used on type Nos. 0017, 0129, 0130, 0181, 0185, 0195, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0239, 0243, 0255, 0266, 0276, 0277, 0283, 0286, 0288, 0290, 0293, 0294, 0296, 0298, 0299, 0303, 0304, 0305, 0306, 0307, 0308, 0310, 0319, 0324, 0343, 0345, 0350, 0351, 0352, 0353, 0354, 0355, 0357, 0359, 0376, 0389, 0391, 0400, 0406, 0409, 0414, 0418, 0419, 0420, 0422, 0424, 0425, 0431.
74	93490	Screw—Sem	95	93385	Screw—Throttle Valve to Shaft Sem	189	90366	Washer—Lock, 5/16 x 1/8 x 1/16
75	220865	Washer—Spring	96	211203	Throttle—Carburetor	190	93341	Screw—Fuel Tank Mounting Sem
76	68238	Washer—Ratchet Sealing	97	299212	Shaft and Lever—Throttle	191	*27911	Gasket—Fuel Tank Mounting (2)
79	290779	Case Assembly—Gear	114	66594	Gasket—Needle Valve Nut	200	221480	Guide—Air
80	27667	Gasket—Gear Case	116	65978	Packing—Needle Valve	201	260661	Link—Governor
81	220234	Lock—Screw	117	230590	Nut—Needle Valve	202	260678	Link—Throttle
82	91541	Screw—Cap, Hex. Hd. — 5/16-24 x 7/8"	118	23433	Valve—Needle	203	297718	Crank—Bell
82A	92279	Screw—Cap, Hex. Hd. — 5/16-24 x 1-1/2"	120	92290	Washer—Lock, No. 10 x 1/16 x 3/64"	204	230844	Bushing—Governor Lever (Flat) Note: 230943 Bushing—Governor Lever (with 1/2" dia. Flange) or: — 23688 Bushing—Governor Lever (with 3/8" dia. Flange) Used on type Nos. 0130, 0148, 0174, 0181, 0184, 0185, 0194, 0196, 0221, 0230, 0233, 0237, 0239,
83	211729	Shaft and Gear—Drive Note: 211919 Shaft and Gear— Drive Used on Type Nos. 0350, 0351, 0355, 0420, 0424. 211961 Shaft and Gear— Drive Used on type Nos. 0406, 0431.	124	93357	Screw—Hex. Head			
84	92617	Plug—Breather	147	230591	Seat—Needle Valve			
85	92747	Screw—Gear Case Mounting Sem	148	22235	Washer—Needle Valve (2)			
86	291730	Cover Assy.—Gear Case	149	26336	Spring—Needle Valve			
87	19011	Seal—Oil	152	260575	Spring—Throttle Adjustment			
88	27313	Gasket—Gear Case Cover	154	92634	Screw—Machine, Rd. Hd. —5-40 x 5/8"			
89	93448	Plug—Oil Drain	163	*27660	Gasket—Air Cleaner Mtg.			
90	299437	Carburetor Assembly Note: 299576 Carburetor Assy.	180	297600	Tank Assembly—Fuel Note: 390160 Tank Assy.—Fuel Used on type Nos. 0235, 0245, 0259, 0266, 0267, 0269, 0276, 0278, 0282, 0284, 0285, 0286, 0287,			

* Included in Gasket Set—Part
No. 297615.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0247, 0255, 0316, 0352, 0353, 0359, 0364, 0406, 0414, 0416, 0418, 0419, 0422, 0425, 0431.	229	220680	Washer—Governor Lever			0246, 0252, 0253, 0259, 0261, 0266, 0269, 0272, 0275, 0284, 0285, 0288, 0289, 0294, 0297, 0305, 0318, 0322, 0334, 0341, 0368, 0375, 0381, 0415.
205	93566	Screw—Shoulder	230	221559	Washer—Governor Lever			297506 Muffler—Exhaust (Direct Outlet)
206	230149	Nut—Control Rod	231	93064	Screw—Sem			Used on type Nos. 0015, 0125, 0126, 0129, 0135, 0136, 0140, 0141, 0142, 0143, 0153, 0155, 0159, 0172, 0188, 0196, 0201, 0205, 0235, 0237, 0243, 0255, 0271, 0273, 0276, 0286, 0295, 0296, 0299, 0301, 0306, 0307, 0308, 0323, 0330, 0344, 0350, 0351, 0353, 0354, 0357, 0358, 0361, 0364, 0369, 0371, 0373, 0374, 0376, 0377, 0382, 0384, 0385, 0391, 0398, 0405, 0413, 0414, 0417, 0425, 0426, 0434.
	Note:	21772 Nut—Control Rod Used on type Nos. 0241, 0254, 0263, 0370.	232	260478	Spring—Governor Link			390578 Muffler—Exhaust Used on Type No. 0338.
206A	280012	Nut—Control Rod	256	299859	Crank—Bell			390918 Muffler—Exhaust Uses: 222261 Deflector 93014 Screw—Deflector
207	26855	Spring—Control Rod	257	93263	Screw—Fil. Hd. Sem			Used on type Nos. 0363, 0386, 0393, 0402, 0410, 0411, 0422, 0423, 0428, 0433.
208	230737	Rod—Control	265	221535	Clamp—Casing			391055 Muffler—Exhaust Used on type Nos. 0209, 0217, 0260, 0309, 0313, 0379, 0388, 0395, 0399, 0401, 0404, 0416, 0421.
	Note:	230946 Rod—Control Used on type Nos. 0199, 0200, 0209, 0318, 0331, 0334, 0346, 0375, 0376, 0379, 0387, 0395, 0401, 0404, 0412.	267	93496	Screw—Sem			391060 Muffler—Exhaust Used on type Nos. 0133, 0200.
209	260695	Spring—Governor	268	66986	Casing—Control Wire—48" long			302 91242 Locknut—Muffler and Elbow
216	299859	Link—Choke		Note:	If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.			303 91464 Elbow—Exhaust, 90°, Street
216A	260879	Rod—Choke	269	26099	Wire—Control 54" long			Note: 91219 Elbow—Exhaust, 45°, Street
217	260189	Spring—Choke Link		Note:	If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.			Used on type Nos. 0266, 0313, 0316, 0341, 0375, 0400, 0415.
218	221198	Washer—Choke Link						
219	297656	Gear—Governor	270	63426	Locknut—Control Wire Casing			
220	221551	Washer—Thrust	271	290568	Lever Assy.—Control			
223	221517	Lever—Governor Control	280	221384	Strap—Control Rod			
224	93491	Rivet—Governor Control Lever Mounting		Note:	230944 Guide—Control Rod Used in 221384 Strap on type Nos. 0015, 0035, 0036, 0037, 0049, 0070, 0268, 0270.			
	Note:	93440 Screw—Sem Used with 230943 Bushing (1/2" dia. Flange) and 93569 Spring Washer or: — 90597 Screw—Mach., Rd. Hd.—10-32 x 1/2" Used with 23688 Bushing (3/8" dia. Flange) and 260847 Spring Washer on type Nos. 0017, 0130, 0148, 0174, 0181, 0184, 0185, 0194, 0196, 0221, 0230, 0233, 0237, 0239, 0247, 0255, 0272, 0277, 0281, 0298, 0316, 0324, 0325, 0327, 0336, 0337, 0340, 0350, 0351, 0352, 0353, 0359, 0364, 0406, 0414, 0416, 0418, 0419, 0422, 0425, 0431.			390341 Strap—Control Rod Used on type Nos. 0148, 0154, 0158, 0160, 0174, 0184, 0194, 0230, 0247, 0281, 0316, 0325, 0327, 0336, 0337, 0340, 0364, 0416, 0422.			
227	297601	Lever Assy.—Governor	300	297274	Muffler—Exhaust (Side Outlet)			
				Note:	89953 Muffler—Exhaust Used on type Nos. 0316, 0349, 0407.			
					294599 Muffler—Exhaust Used on type Nos. 0137, 0149, 0167, 0169, 0179, 0192, 0207, 0222, 0225, 0231, 0238, 0242, 0245,			

130202 to 130298

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	299410	Housing—Blower		391083	Motor—Starting (110 Volt)	347	221808	Switch—Stop
	Note:	297596 Housing—Blower			Used on type No. 0345.		Note:	293739 Switch—Stop
		Used on type Nos. 0222, 0257, 0267, 0269, 0303.	310	93648	Bolt—Starter Motor			Used on type Nos. 0219, 0258, 0272, 0286, 0383.
		297855 Housing—Blower	325	299421	Starter Pulley with Screen	353	92791	Washer—Lock—Shakeproof (2)
		Used on type Nos. 0243, 0244, 0250, 0274, 0275, 0293, 0294, 0296, 0310, 0367.	330	69932	Rope—Starter	354	90576	Nut—Hex. —8-32
		298572 Housing—Blower	331	220865	Washer—Flywheel	356	295413	Wire—Ground
		Uses: 222060 Spacer—	332	92284	Nut—Flywheel		Note:	93708 Clip used to retain
		Starter Housing to	333	298316	Armature—Magneto			Ground Wire lead to
		Blower Housing	334	93613	Screw—Armature			Cylinder Rib on type Nos.
		93042 Screw—			Mounting Sem (2)			0345, 0351, 0352, 0353,
		Spacer Mounting	335	93414	Screw—Armature Mtg. Sem			0358, 0373, 0391, 0400,
		Used on type No. 0147.	337	298809	Plug—Spark (with Gasket)			0402, 0406, 0409, 0411,
		299487 Housing—Blower		Note:	Spark Plugs 298809,			0417, 0418, 0419, 0425.
		Used on type Nos. 0017, 0129, 0130, 0181, 0185, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0239, 0255, 0277, 0283, 0290, 0298, 0319, 0324, 0350, 0355, 0357, 0359, 0389, 0414, 0420, 0431.			29693 and 293918 use			391115 Wire—Ground
		390658 Housing—Blower			Ignition Cable Terminal			Used on type Nos. 0373,
		Used on type Nos. 0119, 0121, 0123, 0358, 0361, 0373, 0388, 0391, 0392, 0400, 0402, 0411, 0417.			No. 221798.			0391, 0400, 0411, 0417,
		390884 Housing—Blower			29693 Plug—Spark			0429, 0433, 0434.
		Used on type Nos. 0345, 0351, 0352, 0353, 0406, 0409, 0418, 0419, 0424, 0425.			(with Gasket)	357	91539	Key
					2" High—51 M.M.	358	297615	Gasket Set
					293918 Plug—Spark	372	220477	Clamp—Condenser
					Used on type Nos. 0038, 0169, 0201, 0219, 0221, 0248, 0258.	374	92813	Washer—Lock
						375	294628	Breaker Points and
								Condenser Set
							Note:	299061 Ignition Kit
								Includes: 294628 Point
								Set
								65704 Plunger
								61760 Key—
								Flywheel
						392	260455	Spring—Fuel Pump
								Diaphragm
						394	270026	Diaphragm
						409	299837	Lever—Trol—Speed Control
						414	220982	Washer
						423	93654	Screw—Sem
						432	221377	Cap—Spring
						433	93265	Pin—Diaphragm Cover
						434	210959	Cover—Diaphragm
						435	93141	Screw—Diaphragm Cover
						454	296178	Housing—Fuel Pipe
								Screen (for 3/16" O. D.
								Pipe)
						473	93475	Screw—Sem
						474	390410	Alternator Assembly
							Note:	391052 Alternator Assy.
								Used on type Nos. 0373,
								0391, 0392, 0400.
						481	230970	Bushing—Stator
305	93158	Screw—Blower Housing Mounting	340	26018	Spring—Breaker Arm			
306	221511	Shield—Cylinder	341	93381	Screw—Breaker Arm			
307	93042	Screw—Cylinder Shield Mounting Sem			Mounting Sem			
308	221512	Cover—Cylinder Head	342	65704	Plunger—Breaker Point			
	Note:	222291 Guard—Muffler	344	93042	Screw—Condenser Clamp			
		(Mounted to Cylinder Head)			Mounting Sem			
		Used on type No. 0200.	345	220366	Cover—Breaker Point			
				Note:	and Condenser			
					222168 Cover—Breaker			
					Point and Condenser			
					Used on type Nos. 0017, 0129, 0130, 0181, 0185, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0239, 0255, 0277, 0283, 0290, 0298, 0319, 0324, 0345, 0350, 0351, 0352, 0353, 0355, 0357, 0359, 0389, 0406, 0409, 0414, 0418, 0419, 0420, 0422, 0424, 0425, 0431.			
309	390718	Motor—Starting (110 Volt)						
	Note:	390551 Motor—Starting	346	93014	Screw—Dust Cover			
		(12 Volt)			Mounting			
		Used on type Nos. 0121, 0123, 0358, 0388, 0402, 0411.						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
482	93639	Screw—Alternator Armature Mounting	538	299545	Rod—Control	635	66538	Elbow—Spark Plug
506	90200	Screw—Machine, Fil. Hd. —8-32 x 1/2"	Note:	390756	Rod—Control	Note:	291630	Shield—Spark Plug
507	66895	Insulator			Used on type Nos. 0017, 0130, 0181, 0185, 0196, 0221, 0233, 0237, 023			Used on type Nos. 0139, 0160, 0246, 0315, 0341, 0349, 0403.
513	391029	Drive Assy.—Starter			0255, 0277, 0298, 0324, 0350, 0351, 0352, 0353, 0359, 0406, 0414, 0418, 0419, 0425, 0431.	638	92713	Washer—Lock
Note:	390581	Drive Assy.—Starter				655	221014	Anchor—Spring
		Used on type Nos. 0121, 0123, 0358, 0388.	539	221372	Clip—Control Rod	664	93358	Screw—Sem
516	260374	Spring—Connector	539A	93520	Clamp—Choke Rod	665	298858	Oil Minder
521	298529	Shielding—Ignition Cable	541	22398	Washer	670	261065	Spacer—Armature
526	93343	Screw—Tank Bracket Mounting Sem	542	92265	Screw	681	299060	Needle Valve Kit
527	221514	Clamp—Breather Tube	544	390467	Armature—Starter	682	211516	Shield—Clutch
528	230722	Tube—Breather	548	93649	Washer—Armature	712	222279	Guard—Ring Gear
529	67838	Grommet—Breather Tube	552	230732	Bushing—Governor	725	221885	Shield—Heat
534	93322	Screw—Air Cleaner	562	92613	Bolt—Governor Lever	727	390543	Housing—Drive
Note:	230741	Stud—Air Cleaner	592	90356	Nut—Hex. —10-24	729	270723	Tie—Rectifier Wire
	92067	Nut—Wing	608	299334	Starter Assy.—Rewind	731	299419	Hood—Snow
		Used on type Nos. 0204, 0241, 0248, 0254, 0300, 0314, 0348, 0356, 0370, 0378, 0403, 0422.	Note:	298573	Starter Assy.—Rewind	Note:	390870	Hood—Snow
535	27987	Element—Air Cleaner			Used on type No. 0147.			Uses: No. 280091 Sealing Strip used between Hood and Blower Housing
Note:	270209	Element—Air Cleaner	609	260694	Spring—Throttle Link			Used on type Nos. 0351, 0352, 0353, 0406, 0418, 0419, 0424, 0425.
		Used on type Nos. 0204, 0241, 0248, 0254, 0300, 0314.	612	296811	Pipe—Fuel	733	93518	Screw—Hood
	390492	Element—Air Cleaner	613	93377	Screw—Muffler Mounting	735	390900	Cord—Starter
		Uses: 390588 Cover—Air Cleaner	Note:	93704	Screw—Muffler Mtg.			(Includes Switch and Adapter)
		221969 Support—Air Cleaner			Uses: 222263 Lock—Screw	748	93534	Screw—Sem
		270730 Gasket—Air Cleaner			Used on type Nos. 0363, 0386, 0393, 0402, 0410, 0411, 0422, 0423, 0428, 0433.	779	390383	Link—Bell Crank
		Used on type Nos. 0348, 0356, 0370, 0378, 0403, 0422.	614	93306	Cotter—Hair Pin	780	222101	Anchor—Spring
536	297036	Cleaner Assembly—Air	615	93307	Retainer—E-Ring	Note:	222267	Anchor—Spring
Note:	299593	Cleaner Assy.—Air	616	230723	Crank—Governor			Uses: No. 93496 for mounting to Tank Bracket.
		Uses: 221969 Support—Air Cleaner	621	297472	Switch—Stop			Used on type Nos. 0343, 0354, 0372, 0380, 0391, 0400, 0410, 0411.
		280015 Cup—Air Cleaner	624	390383	Crank—Bell	783	230972	Pinion—Starter Motor
		Used on type Nos. 0204, 0241, 0248, 0254, 0300, 0314.	626	230749	Spacer—Governor Crank	785	270718	Gasket—Starter Drive Housing
			629	261094	Spring—Throttle Return	801	390544	End Head—Starter
			Note:	261137	Spring—Throttle Return	802	390465	Cap Assy.—Commutator End
					Uses: No. 222268 Connector between Lever on Tank Bracket and Control Wire.	803	390468	Housing Assy.—Starter
					Used on type Nos. 0343, 0354, 0372, 0380, 0391, 0400, 0410, 0411.	809	390414	Rectifier—Alternator
			634	270167	Washer, Throttle Shaft (Felt)	Note:	391051	Housing Assy.
								Used on type Nos. 0373, 0391, 0392.
						823	93712	Screw—Socket Head

130202 to 130298

